

What to do if...

What to do if...



A tire punctures

P. 368 If you have a flat tire



The engine does not start

P. 378 If the engine will not start

P. 51 Engine immobilizer system

P. 381 If the battery is discharged



The shift lever cannot be moved out

P. 379 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 384 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 380 If you lose your keys



The battery runs out

P. 381 If the battery is discharged



The doors cannot be locked

P. 7 Side doors

P. 12 Back door



The horn begins to sound

P. 53 Alarm



The vehicle is stuck in mud or sand

P. 386 If the vehicle becomes stuck



The warning light or indicator light comes on

P. 361 If the warning light turns on



■ Warning lights



Brake system warning light

or



P. 361



Malfunction indicator lamp

or



P. 362



"ABS" warning light

or



P. 362



Driver's seat belt reminder light

P. 364



Front passenger's seat belt reminder light

P. 364



Low fuel level warning light

P. 364



Rear light failure warning light

P. 362



SRS warning light

P. 362



Vehicle stability control system warning light

P. 362



Open door warning light

P. 364



Low engine oil pressure warning light

P. 362



Charging system warning light

P. 362



Tire pressure warning light

P. 362, 364



Automatic transmission fluid temperature warning light

P. 362



Automatic headlight leveling system warning light

P. 362



Low washer fluid warning
light

P. 364



Engine oil replacement
reminder light

P. 364



Dynamic laser cruise control master
warning light

P. 364